


TROLLEY TRAVEL LIMIT SWITCH

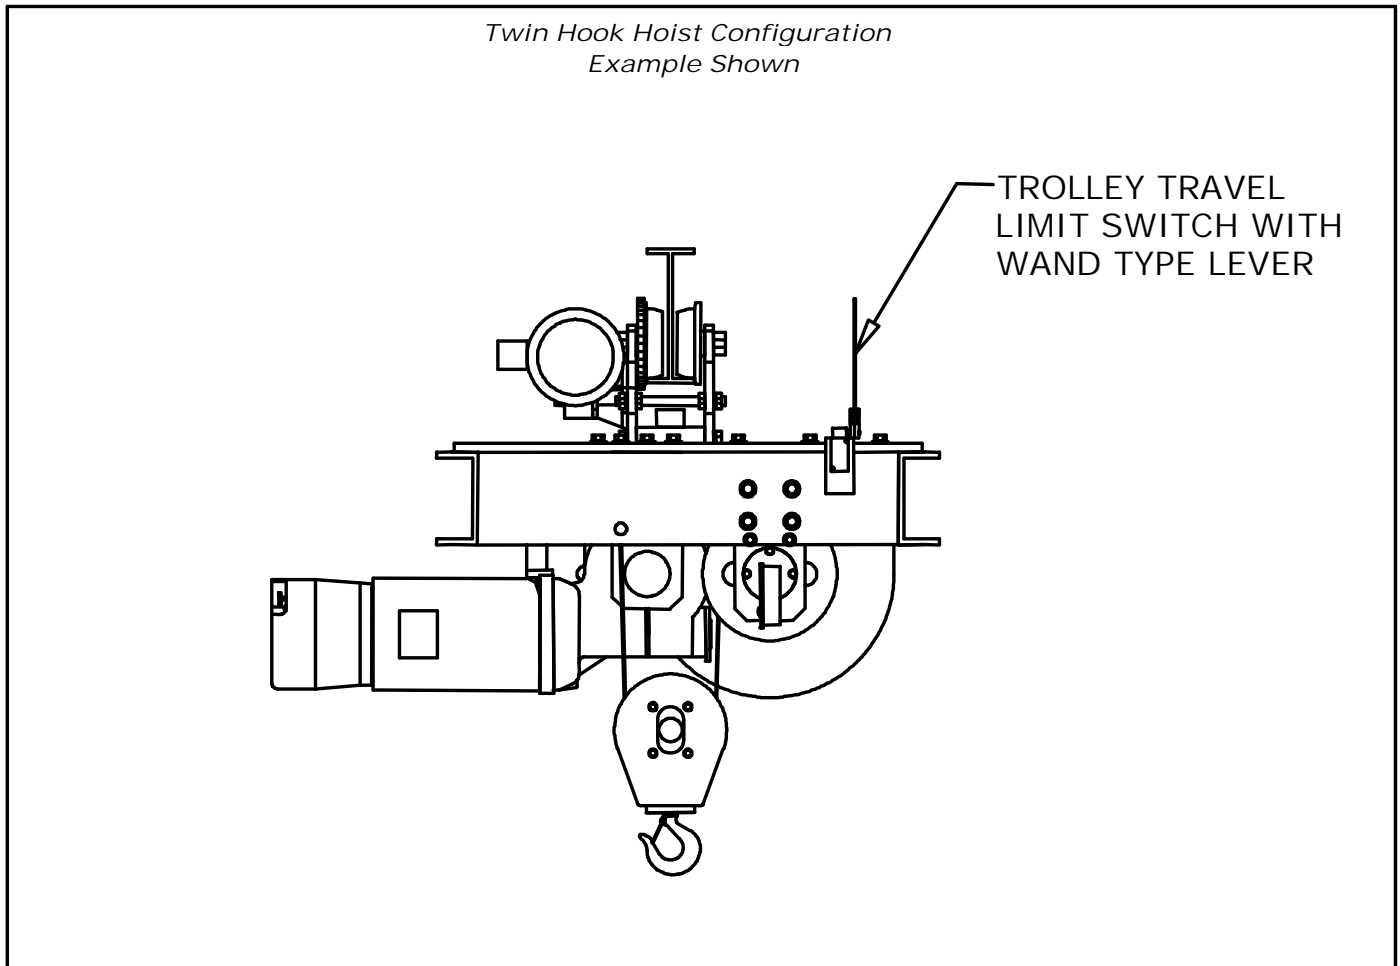

Trolley Travel Limit switches restrict the movement of a motorized trolley on a track. A wand type limit switch engages an end stop cam, and disables movement in the direction the cam was engaged. The location of the switch relative to the track must be agreed upon with Electrolift.