


# ELECTRO LIFT, INC.

204 SARGEANT AVENUE, P.O. BOX 827, CLIFTON NJ 07013  
TELEPHONE 800-338-9951  
FAX NUMBER 973-471-2814  
[www.electrolift.com](http://www.electrolift.com)

## Reeving of a 4 Part Single Hook Block

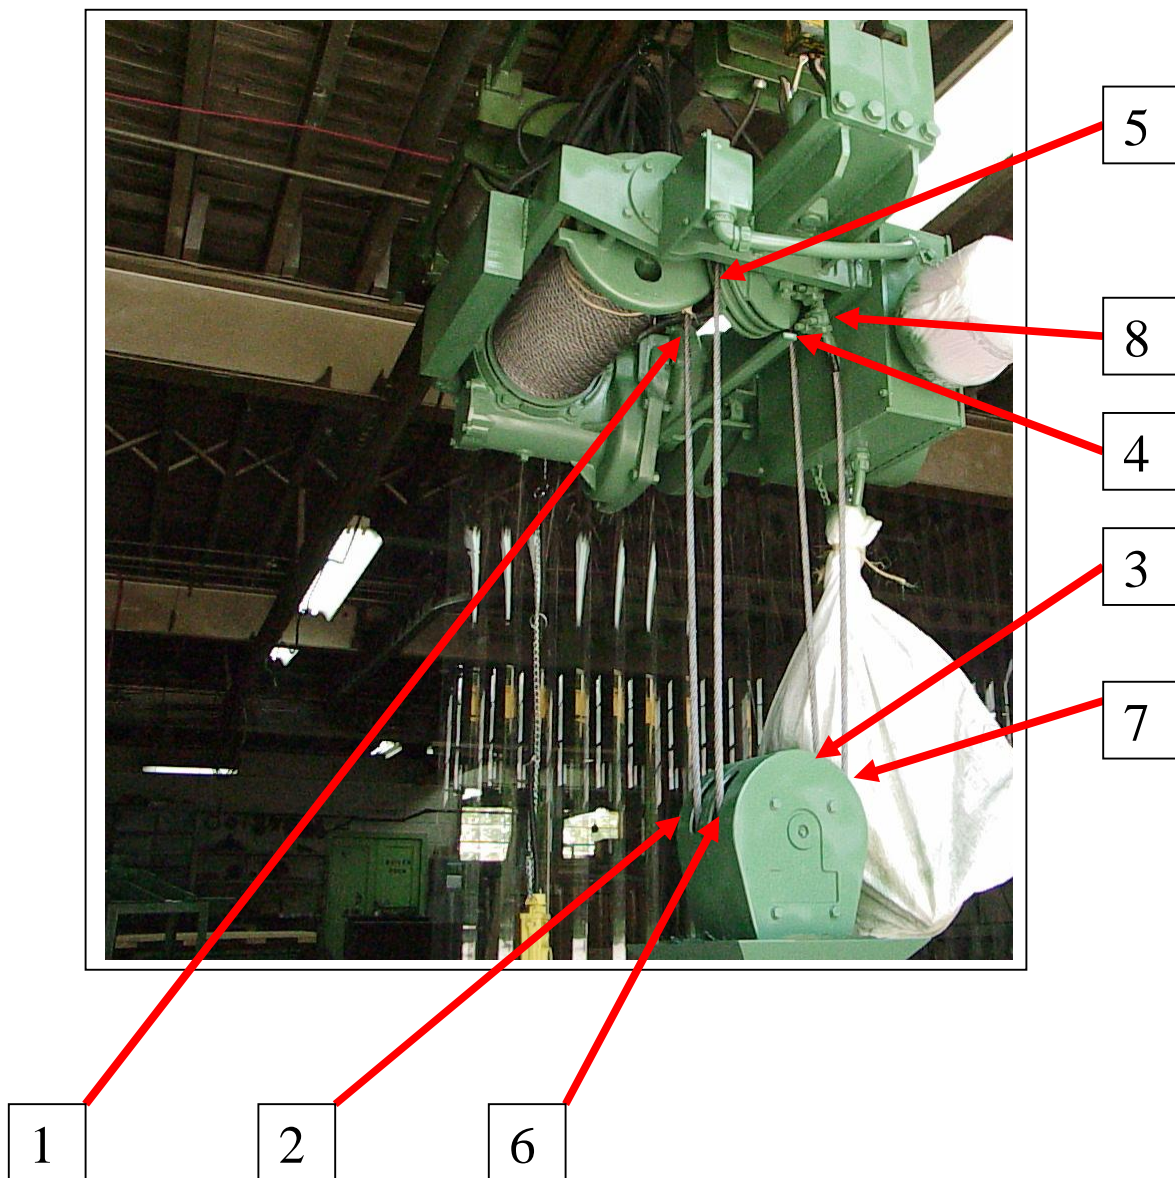

## **WIRE ROPE ROUTING:**

1. Wire rope pays off drum near drum flange. The drum must have all grooves filled with wire rope.
2. Wire rope enters hook block. *Gearbox side, Drum side.* Wire rope goes around the sheave.
3. Wire rope exits hook block. *Gearbox side, Far drum side.*
4. Wire rope enters upper sheave. *Far drum side.* Wire rope goes around the sheave.
5. Wire rope exits upper sheave. *Drum side.*
6. Wire rope enters hook block *Outer frame side, Drum side.* Wire rope goes around the sheave.
7. Wire rope exits the hook block. *Outer frame side, Far drum side.*
8. Wire rope attaches to frame. *Far drum side.*